


ThreeSixty
C E I L I N G F A N S


Sloped Ceiling Kit: SC-XX

**Supports ceiling fans with 26mm
downrods only.**


This accessory can be used on ceiling fans with 26mm downrods and supports angles up to 50° depending on the model and whether a remote receiver unit is installed. Ceiling fans that use remote receivers will reduce the angle in most ceiling fans. The receiver must be inserted after the ceiling fan is mounted.

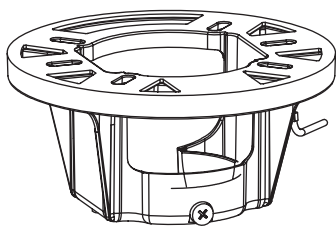

Hanger Bracket

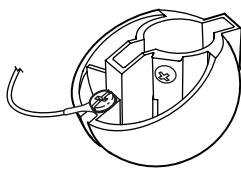

Offset Hanger Ball

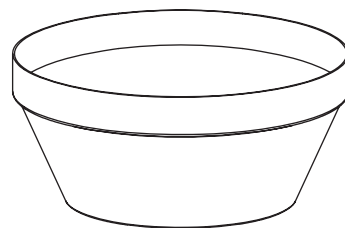

Ceiling Canopy



Dress Ring



**MUST BE INSTALLED
BY A LICENSED
ELECTRICIAN**

IMPORTANT: This accessory must be installed by a licensed electrician, and all electricity must be turned off at the fuse box prior to installing this accessory. Refer to the Ceiling Fan's Owner's Manual for full safety and warning information.

1. Longer Accessory Downrod to be installed


Due to the nature of this accessory, a longer accessory downrod will most likely need to be fitted to the ceiling fan to avoid the blades coming into contact with the ceiling. Depending on the degree of the ceiling slope, ensure the ceiling fan has sufficient drop from the roof to avoid the blades hitting the ceiling. Install the longer Downrod (ensuring sufficient wiring and/or wiring looms to go through the Downrod) and then follow the instructions to add the Sloped Ceiling Kit Accessory.

2. Install the Sloped Ceiling Hanger Bracket

Drill a hole in the ceiling board and batten for wiring. Securely attach the Hanger Bracket to a timber batten or other structural support using the two wood screws provided with your ceiling fan. Fixings must be screwed into a joist and not just the plasterboard.

NOTE: For models using remote controls, to maximise the space for the receiver in the cavity above the hanging ball, the household supply wire should come through one of the holes on either side of the bracket NOT IN THE CENTRE. Ideally bring the supply cable in on the terminal block side. This allows for maximum movement of fan when the receiver is in place.


IMPORTANT: Fixing location must be able to withstand four times the static weight of the fan.
IMPORTANT: Ensure the Hanger Bracket opening faces upwards towards the slope.

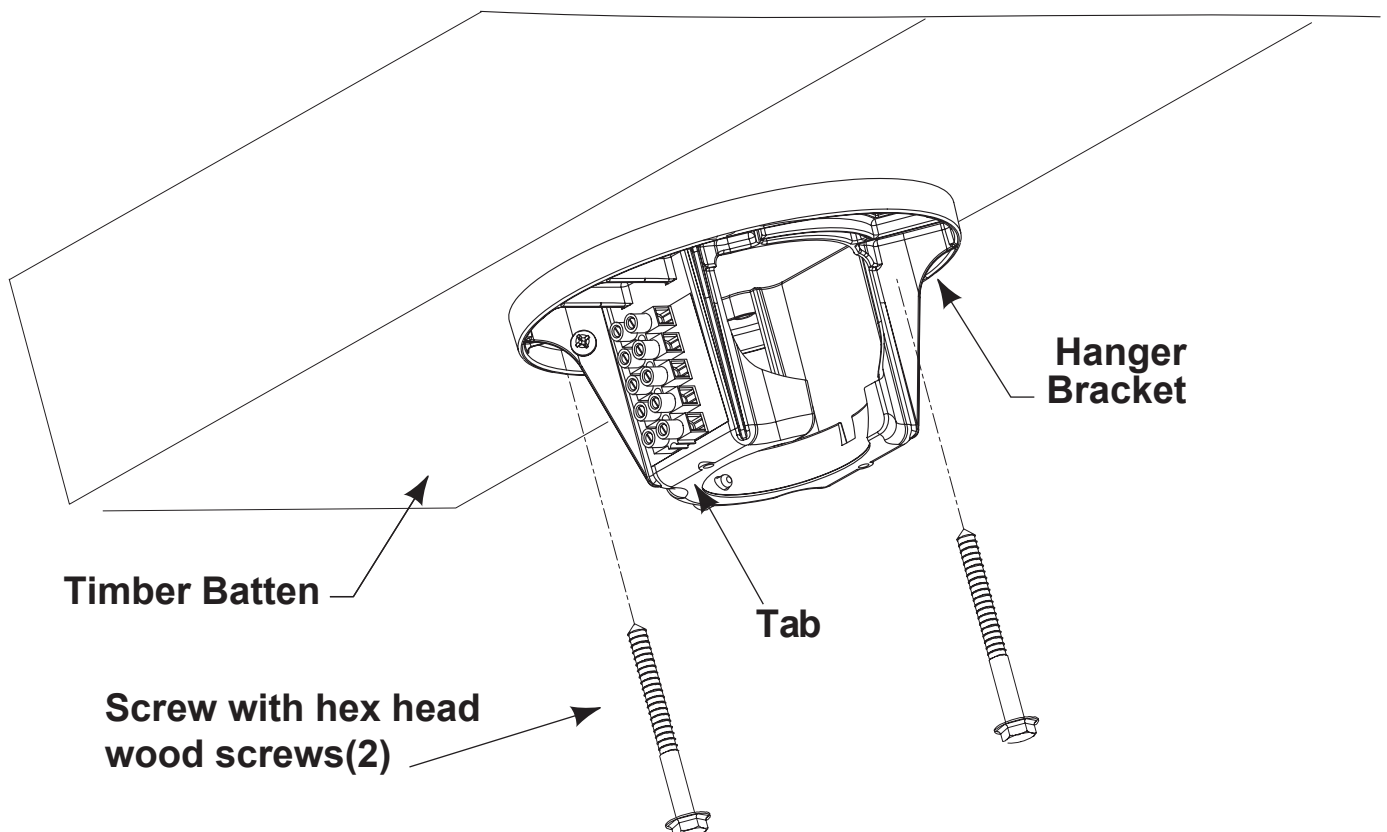

3. Remove Hanger Ball, Ceiling Canopy & Dress Ring

The Sloped Ceiling Kit replaces the ceiling fan's Hanger Ball, Ceiling Canopy and Dress Ring, these parts should be removed from the ceiling fan.


1. Remove the Hanger Ball by loosening the setscrew until the ball falls freely down the Downrod. Remove the Pin from the Downrod, then remove the Hanger Ball.
2. Remove the Ceiling Canopy.
3. Remove the Dress Ring.

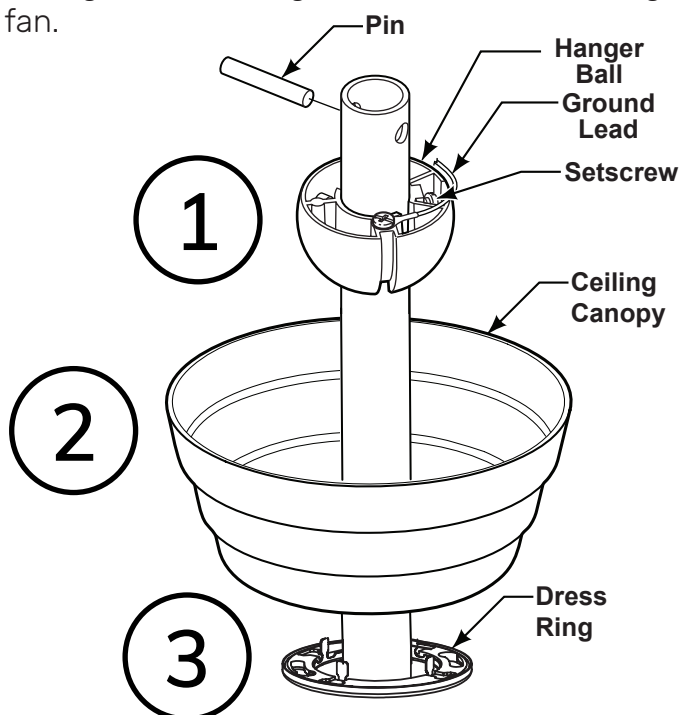

4. Add the Sloped Ceiling Kit Hanger Ball, Ceiling Canopy & Dress Ring

Slide the Dress Ring and Ceiling Canopy over the Downrod and then install the Sloped Ceiling Hanger Ball.

1. Slide the Sloped Ceiling Kit Dress Ring over the ceiling fan's Downrod (threading through the wires).
2. Slide the Sloped Ceiling Kit Ceiling Canopy over the ceiling fan's Downrod (threading through the wires).
3. Install the Sloped Ceiling Kit Hanger Ball by routing the wires through the ball and then sliding the Hanger Ball down the Downrod. Insert the Hanger Ball Pin through the two holes in the Downrod and align the Hanger Ball so the Pin is captured in the groove in the top of the Hanger Ball. Pull the Hanger Ball up tight against the Pin and then securely tighten the setscrew in the Hanger Ball.

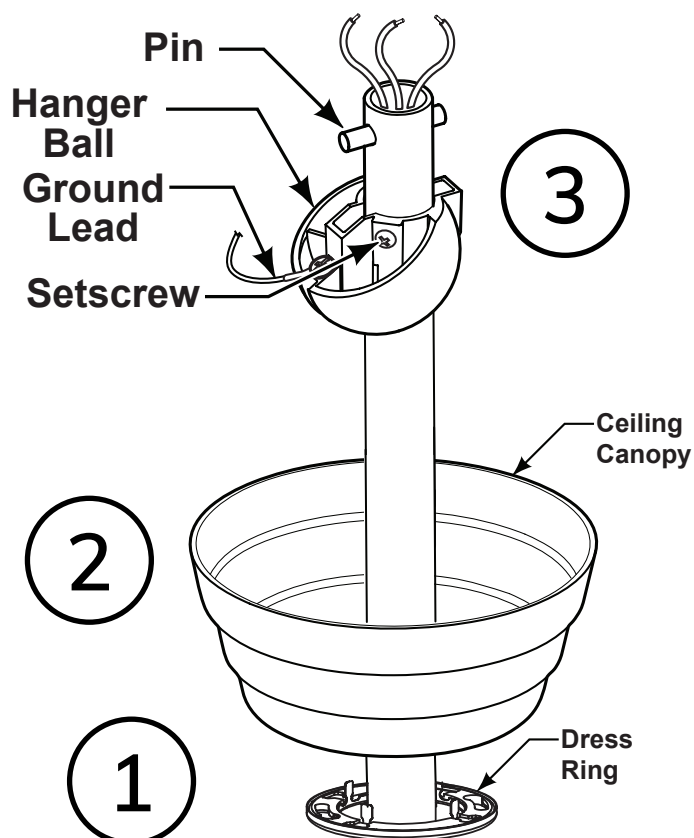


5. Set the assembled fan into the Hanger Bracket

Carefully lift the assembled fan and seat the Downrod/Hanger Ball into the Hanger Bracket that was previously installed on the ceiling.

Ensure the tab on the hanger bracket is locked into the slot on the ball. (This is important to ensure the fan will not wobble or rotate and the weight of the fan is properly supported).

IMPORTANT: Complete all wiring as per the Ceiling Fan's Owner's Manual before moving on to Step 6.

IMPORTANT: Once the fan is mounted, insert the remote control receiver if required and complete all wiring as per the Installation Manual for that remote control.

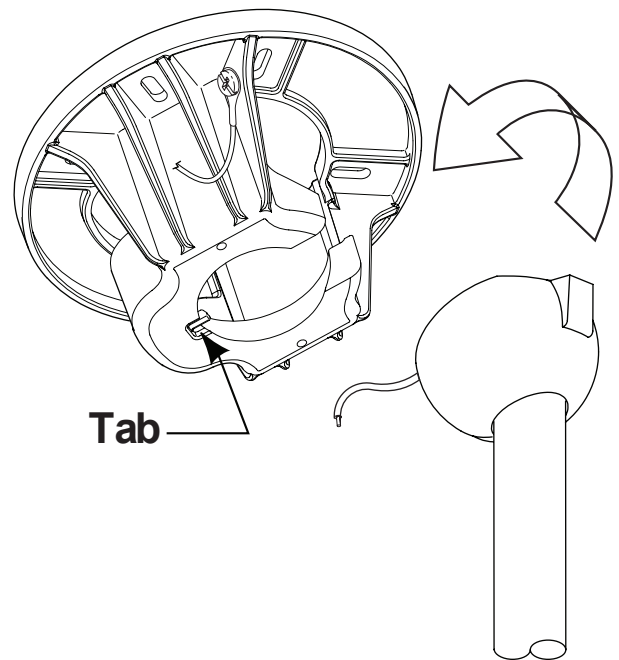

6. Securely attach the Ceiling Canopy and Dress Ring

IMPORTANT: Ensure all wiring has been completed as per the Ceiling Fan Owner's Manual before installing the Ceiling Canopy and Dress Ring.

1. Loosen the two shoulder screws without fully removing them from the Hanger Bracket. Slide the Ceiling Canopy up and over the two shoulder screws, and then twist the ceiling canopy to lock into place. Fully tighten the two shoulder screws to lock the Ceiling Canopy into place.
2. Slide the screw Dress Ring up and over the two shoulder screws in the Hanger Bracket, utilising the keyslot twist-lock feature to lock the Dress Ring in place.

