

UNDERSTANDING YOUR REMOTE

SLDFL10W, SLDFL30W & SLDHB-100W

MANUAL MODE



To Activate Manual Mode:

- Press 'MODE' button, now the light can be controlled manually
- **ON/OFF** buttons can turn light on or off at any time, day or night
- In Manual Mode, if buttons 1-6 are pressed, this will determine the time, in hours, that the light will operate at full brightness before switching off
E.g. If button '4' is pressed, the light will operate at 100% immediately after the button is pressed, for 4 hours, then it will turn off

In Manual Mode

- ON/OFF Buttons are valid
- Brightness is adjustable while in operation

AUTOMATIC MODE (DAY/NIGHT)



To Activate Automatic Mode:

- Press 25% Button, light will now operate automatically from dusk 'til dawn.
- Whilst in automatic mode, if buttons 1-6 are pressed this will determine the time in hours that the light will operate at full brightness before reducing to 50%.
E.g. If button '4' is pressed, the light will automatically reduce to 50% brightness after 4 hours of operation from dusk.
- Once the light is operating at 50% brightness, if another 1-6 number is pressed then the timer process will restart
- **Note:** If buttons 1-6 are not pressed, the light will remain at 100% brightness until the battery discharges or there is daylight

Light will blink when your desired settings have been received by the light

In Automatic Mode:

- ON/OFF Buttons are invalid
- Brightness is adjustable while in operation

