

WARNING- THIS PRODUCT MUST BE INSTALLED ONLY BY A LICENSED OR QUALIFIED ELECTRICAL WORKER. FAILURE TO FOLLOW THE WIRING RULES OR THESE INSTRUCTIONS MAY RESULT IN AN ELECTRICAL HAZARD. WARRANTY IS VOID UNLESS A CERTIFICATE OF COMPLIANCE OR A RECEIPT FROM A LICENSED INSTALLER IS AVAILABLE.

**MAKE SURE THE WALL SWITCH IS ON OR REMOTE CONTROL WILL NOT WORK**  
**Also see POWER-ON LIGHT SELECTOR section below to avoid unwanted light operation**

**Instructions for Use** – Press the desired Fan Speed button as required. Press the Light button once to turn light on or off. The ‘All-Off’ button simultaneously switches off both fan and light.

 
#### **Handset Battery Installation/Replacement**

Open the battery compartment by sliding the hatch downwards. Gently press the grooved section inwards to disengage latch. UNWRAP THE PLASTIC FROM AROUND NEW BATTERIES. Observe polarity and make sure battery sits properly in recess. Slide hatch back into place.

#### **How To Add a New or Replacement Handset**

The receiver can learn the identification code for a new handset using the following procedure:

- A. Turn off the power to the receiver for 30 seconds
- B. Toggle the power ON and OFF as follows (each ON and OFF must be 2 secs).



- C. The receiver will beep four times when it enters program mode. The duration of each on period and each off period must be 2 seconds.
- D. Move the new handset to within 2 metres of the receiver and press “LEARN” button on handset.

**WARRANTY PERIOD: 12 MONTHS FROM DATE OF PURCHASE. SEE TERMS AND CONDITIONS OF WARRANTY. YOU WILL BE CHARGED A SERVICE FEE IF THE PRODUCT IS NOT DEFECTIVE OR IS DAMAGED BY POWER SURGES, LIGHTNING, WEATHER, MISUSE/ABUSE AND SIMILAR SITUATIONS. INSTALLATION INSTRUCTIONS MUST BE FOLLOWED.**

#### **INSTALLATION INSTRUCTIONS AND RECOMMENDATIONS:**

This remote control system is for use only as intended and connection or installation outside of recommendations by Hunter Pacific International will void the warranty.

1. The receiver and handset portions are for indoor use only and must be connected to supply circuits fitted with surge arrestors in the switch board.
2. This system must be connected in series with an isolation switch that is accessible to the user. Connection without an isolation switch may cause undue expense to the customer if a fault develops. Emergency disconnection under fault conditions is not covered by warranty.
3. Placing the receiver in the ceiling cavity may exceed its maximum operating temperature, reduce its life or make it work erratically and will void warranty.
4. An internal, non-replaceable high rupture capacity fuse is fitted in the receiver. If an in-situ receiver is open circuit then check for a fault in the attached fan or light before replacing and possibly damaging another receiver.

#### **POWER-ON LIGHT SELECTOR**

The POL selector switch is located on the side of the receiver. This switch sets the power-on default condition of the light. When ON the light turns on when power is applied (via the isolating/wall switch). When OFF the light remains off when power is applied. The OFF position is recommended for holiday houses and similar locations.

**DANGER - DO NOT ACCESS THIS SWITCH WITH POWER APPLIED TO THE RECEIVER.**

#### **CONNECTIONS:**

Wire the remote control receiver to the fan and light using the wiring tails as labelled. The fan and light must be earthed. Place the receiver into the under ceiling canopy within the space provided in the suspension bracket. Do not place in ceiling cavity. Test system. Show user how the isolation switch works and confirm POL selection.