



UTTERMOST

STYLE NO: 21249

Parts and hardware list

1	Hex Nut	1PCS
2	Canopy	1PC
3	8-32 Screws	2PCS
4	Mounting Plate	1PC
5	Green Ground screw	1PC
6	Wire Nut	5PCS
7	Instruction Sheet	1PC

Please make sure that you have all the parts indicated before you begin assembling this item.
Please Read Wiring Instruction before you begin assembling and installing your chandelier lamp.
WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock

Assembly Instruction

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged.
2. Attach the Crossbar to the Outlet Box by using two 8-32 Screws (See Figure 1).
3. Screw the Loop (D) to the Nipple (K) and secure by Nipple (M).
4. Hang the Open Chain ring (E) to the Loop (D), the fixture wire through the center hole of the Canopy (1) then begin to connect the wires.
5. Connect the arbitrarily 12V output wire from the Ballast to the black wire or smooth wire from the fixture. (Use wirenuts provided) (See Figure 3)
6. Connect the arbitrarily 12V output wire from the Ballast to the white wire or ribbed from the fixture. (Use wirenuts provided). (See Figure 3)
7. Connect the black 120V input wire from the Ballast to the black supply wire or smooth wire(s) (See Figure 3)
8. Connect the white 120V input wire from the Ballast to the white supply wire or ribbed wire(s). (See Figure 3)
9. Connect the fixture ground wire to the outlet box ground wire. (Use wirenuts provided).
10. After the wires are connected, carefully place them inside the Outlet Box (See Figure 1)
11. Tuck these wire connections neatly into the ceiling outlet box and then raise the Canopy (1) all the way to the ceiling. And then secure with Loop Collar (G), then attach the another Open Chain ring (E) to the Collar Loop (H).
12. Install the G4 bulbs (B) to the sockets, and install the MR16 bulb (L) to the socket from the bottom of fixture. (Bulb Included).
13. Attach the Crystals (C) to the Tubes (A) as the same direction of lamp cups and make sure it stable.

PO BOX 558 / 3325 GRASSY HILL RD. ROCKY MOUNT. VIRGINIA 24151
www.uttermost.com

STYLENO: 21249

UTTERMOST

Assembly Instruction

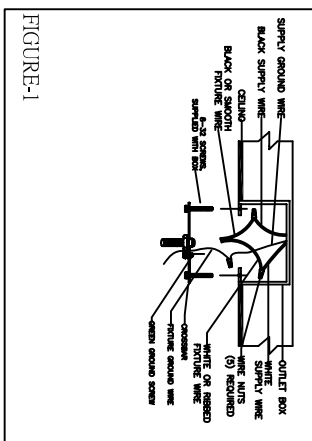 


FIGURE-1

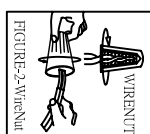 


FIGURE-2-WireNut

 
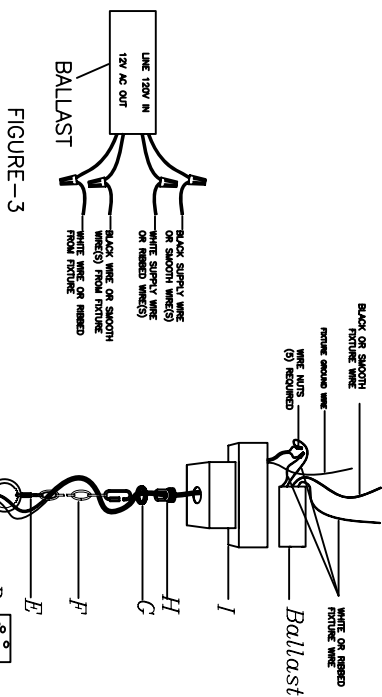 


FIGURE-3

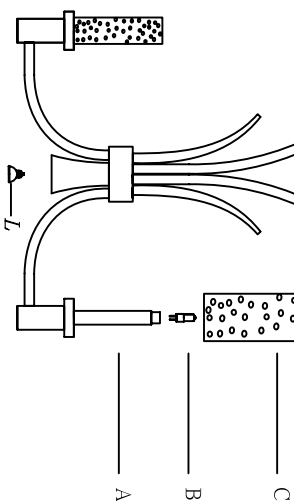

PO BOX 558 / 3325 GRASSY HILL RD. ROCKY MOUNT. VIRGINIA 24151
www.uttermost.com