



UTTERMOST

**STYLE NO.: 21251 PARTS LIST& Hardware List:**

1	Ceiling Assembly	1pc	6	Hex Nut	1pc
2	Cross Bar	1pc	7	Wire Connector	3pcs
3	Outlet Box Screw(1-1/8")	2pcs	8	Glass Shade	6pcs
4	Green Ground Screw	2pcs	9	Finial	1pc
5	Nipple	1pc	10	Chain	1pc

\*Please make sure you have all the parts indicated above before you begin assembling this item.

Please read wiring instructions before you begin assembling and installing your Ceiling Lamp

**WARNING:BEFORE INSTALLING,Make sure electricity supply is shut off to avoid a possible electric shock.**

## ASSEMBLY INSTRUCTIONS

- 1.Take the parts carefully out of the carton,Place them on a flat surface, and make sure the parts will not be damaged.
- 2.Attach the Cross Bar to the Outlet Box by using two Outlet Box Screws. (See Figure1)
- 3.Install the Ground Wire in the Cross Bar with the supplied Green Ground Screw.
- 4.Place the null wire ,ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire,smooth wire evenly against the smooth wire from the Outlet Box,(Connecting the Wire---See Figure 2)
- 5.After the wires are connected,tuck them carefully inside the Outlet Box.Attach the Ceiling Assembly to the Nipple and secure with Chain Connector (See Figure 1)
- 6.Rotate the Wood Post onto the Chandelier Body.Pull the core. Rotate the Finial to the bottom of the chandelier Body,
- 7.Use Chain Link to connect the assembled chandelier ,and use the other Chain Link to connect the Canopy.
- 8.Install 6\*60W,Type B bulbs,(Not Included) into the socket of the fixture.
- 9.Pressing the clip and install the Glass Shade.



# UTTERMOST

