



UTTERMOST

STYLE NO.: 21994 21996 PARTS LIST& Hardware List:

1	Ceiling Assembly	1pc	8	Glass Diffuser	1pc
2	Universal Bar	1pc	9	Finial	1pcs
3	Ball Finial	2pcs	10	Plastic Washer	2pcs
4	Outlet Box Screw(1-1/8")	2pcs	11	Metal Washer	1pcs
5	Green Ground Screw	2pcs	12	Hex Nut	1pc
6	Mounting Screw(1")	2pcs	13	12" Metal Rod	3pcs
7	Wire Connector	3pcs	14	6"Metal Rod	1pc

*Please make sure you have all the parts indicated above before you begin assembling this item.

Please read wiring instructions before you begin assembling and installing your Ceiling Lamp

WARNING: BEFORE INSTALLING, Make sure electricity supply is shut off to avoid a possible electric shock.

ASSEMBLY INSTRUCTIONS

1. Take the parts carefully out of the carton, Place them on a flat surface, and make sure the parts will not be damaged.
2. Remove the Ball finial under the Canopy from the Mounting Screws, and take out the Universal Bar. Attach the Universal Bar to the Outlet Box by using two Outlet Box Screws. (See Figure 1)
3. Install the Ground Wire in the Universal Bar with the supplied Green Ground Screw.
4. Place the null wire, ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire, smooth wire evenly against the smooth wire from the Outlet Box, (Connecting the Wire---See Figure 2)
5. After the wires are connected, tuck them carefully inside the Outlet Box. Attach the Ceiling Assembly to the Mounting Screws and secure with two Ball Finials (See Figure 1)
6. Screw the Shade onto the Metal Rod (A) until tight.
7. Repeat the Step 6 with the Metal Rod (B), (C), (D)
8. Screw the Metal Rod (D) to the Canopy.
9. Install 3*60W, Type A bulbs, (Not Included) into the socket of the fixture.
10. Put the Plastic Washer, Glass Diffuser, another Plastic Washer, and Metal Washer to the Nipple, Then Secure by the Hex Nuts, Then Screw the Finial to Hide the Hex Nut.



UTTERMOST

