



ILLUSTRATION

STYLE NO.: 21241

CLEANING: This item has a lacquered and baked finish. When cleaning only use a soft, dry cloth. Do not use liquid cleansers or abrasives as they may damage the finish.

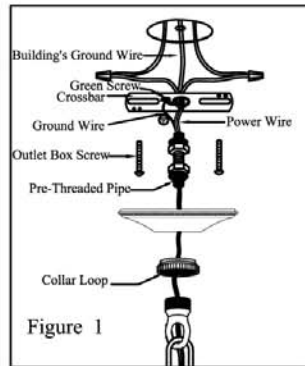


Figure 1


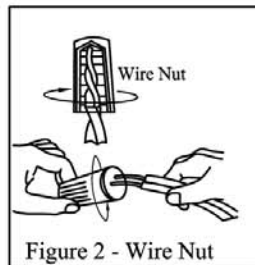


Figure 2 - Wire Nut



PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com

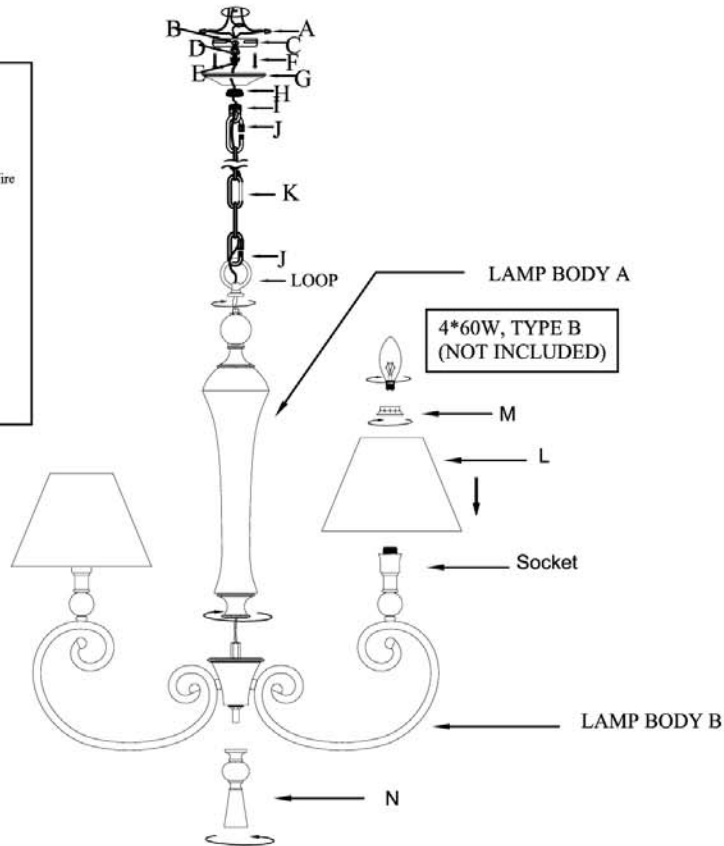

STYLE NO.: 21241

Assembly Instruction

These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning installation of this chandelier. **We strongly suggest that all direct wired fixtures be installed by a professional electrician.**

Carefully remove the parts from the carton and place them on a flat surface. Please make sure that you have all the parts indicated before you begin to assemble this item.

A.	Wire Nut	3PCS
B.	Green Ground Screw	1PC
C.	Crossbar	1PC
D.	Hex Nut	2PCS
E.	Pre-Threaded Pipe	1PC
F.	Outlet Box Screw	2PCS
G.	Canopy	1PC
H.	Pre-Threaded Ring	1PC
I.	Collar Loop	1PC
J.	Quick Link	2PCS
K.	Chain	1PC
L.	Shade	4PCS
M.	Socket Ring	4PCS
N.	Screwing Accessory	1PC

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock.

Assembly Instructions

- Carefully remove the parts and hardware from the carton.
- Attach the Lamp Body A onto the Lamp Body B and secure by turning in a clockwise direction.
- Attach the Screwing Accessory(J) onto the Lamp Body B and secure by turning in a clockwise direction as step 2. (See illustration)
- Fasten the Crossbar (C) onto the Outlet Box by using the Outlet Box Screws (F).
- Insert the shorter end of the Pre-Threaded Pipe (E) into the pre-drilled hole in the Crossbar (C) and secure with the Hex Nuts (D). (See illustration)
- Attach the Collar Loop (I) to the exposed end of the Pre-Threaded Pipe (E) and secure by turning in a clockwise direction.
- Attach one Quick Link (J) on one end of the Chain (K) to the Loop on the top of the Top Cover .
- Slip the Pre-Thread Ring (H) first and then the Canopy (G) over the other end of the Chain (K). Then attach the other Quick Link (J) on the other end of the Chain to the Collar Loop (I).
- Place the wire through every other link of the Chain, through the Collar Loop and up through the Pre-Threaded Pipe (E). (See illustration)
- Install both ground wires in the Crossbar (C) with the Green Ground Screw (B) supplied.
- Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)
- After the wires are connected, tuck them carefully inside the outlet box. Place the Canopy (H) over the outlet box and secure with Pre-Threaded Ring (F).
- Place the Shade(L) on the Socket and secure by the Socket Ring(M). (See Illustration)
- Install 60 Watt, Type B bulbs (NOT INCLUDED) into the sockets of the fixture.