




UTTERMOST

# ASSEMBLY INSTRUCTIONS

## STYLE# 21261

**Carefully unpack all lamp parts from the carton.**

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off
3. Thread the **Coupling A** into the **Rods** and install the **Crystal Tube** onto the **Fixture Body**.
4. Install **Shade** onto fitters. Fasten counter rings onto threaded sockets
5. Place the **Ceiling Canopy** over the **Mounting Screws** and thread Mounting Balls onto the **Mounting Screws** to secure it, Hand tighten until snug.
6. Refer to label on socket and install proper wattage bulb. (Not Included).

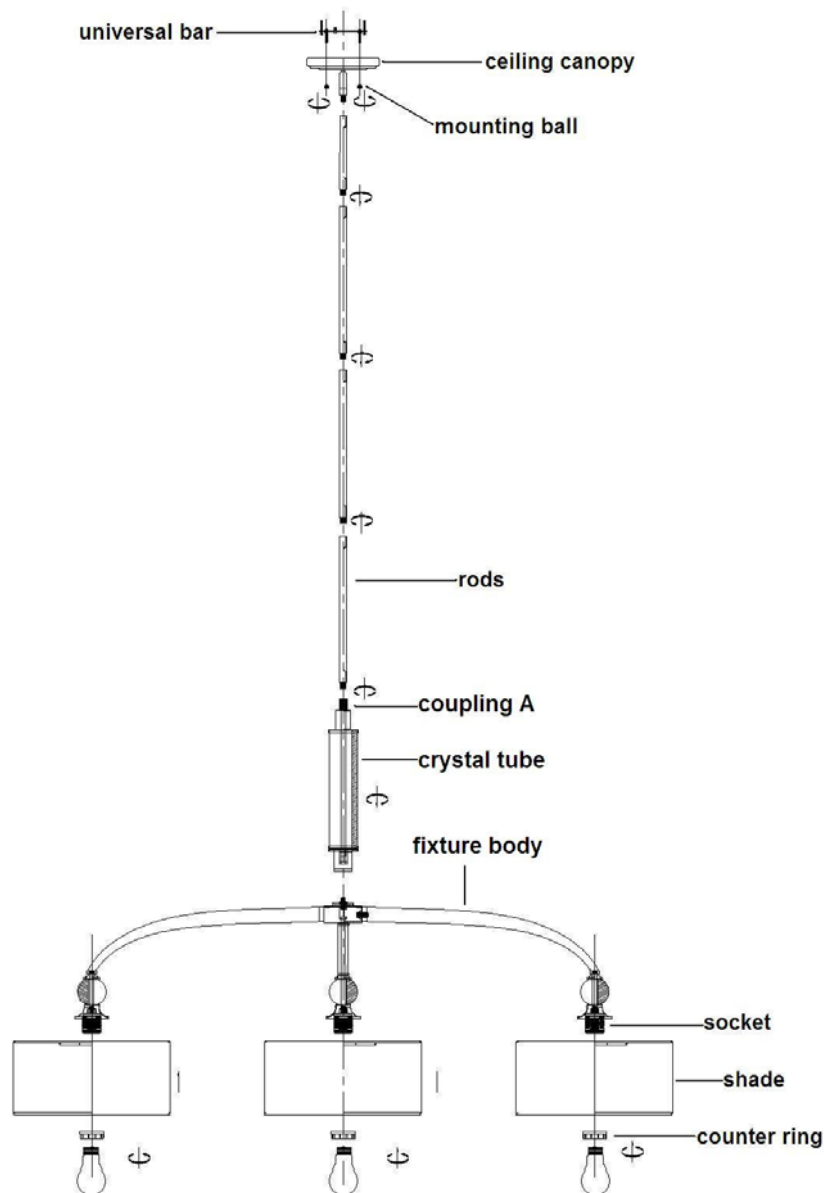

21261

