



UTTERMOST


ASSEMBLY INSTRUCTIONS

ITEM # :21263

IMPORTANT: TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION.

Carefully unpack and identify all parts before assembly.

1. Be sure the power to the installation point is off.
2. Position the **Socket** through the hole on the **Washer**.
3. Position the **Socket** through the hole on the bottom of the **Shelf** and thread **Mounting Balls** onto the lower of **Shelf**. Tighten until snug..
4. Place the Glass Shade over **Socket** and thread the **Socket Collar** onto the **Socket** to secure them. Hand tighten until snug.
5. Locate the lower assembly upward and match the **Hooks** on to the ends of **Support Arms**. Hand tighten until snug.
6. Refer to label on socket and install proper wattage bulb.

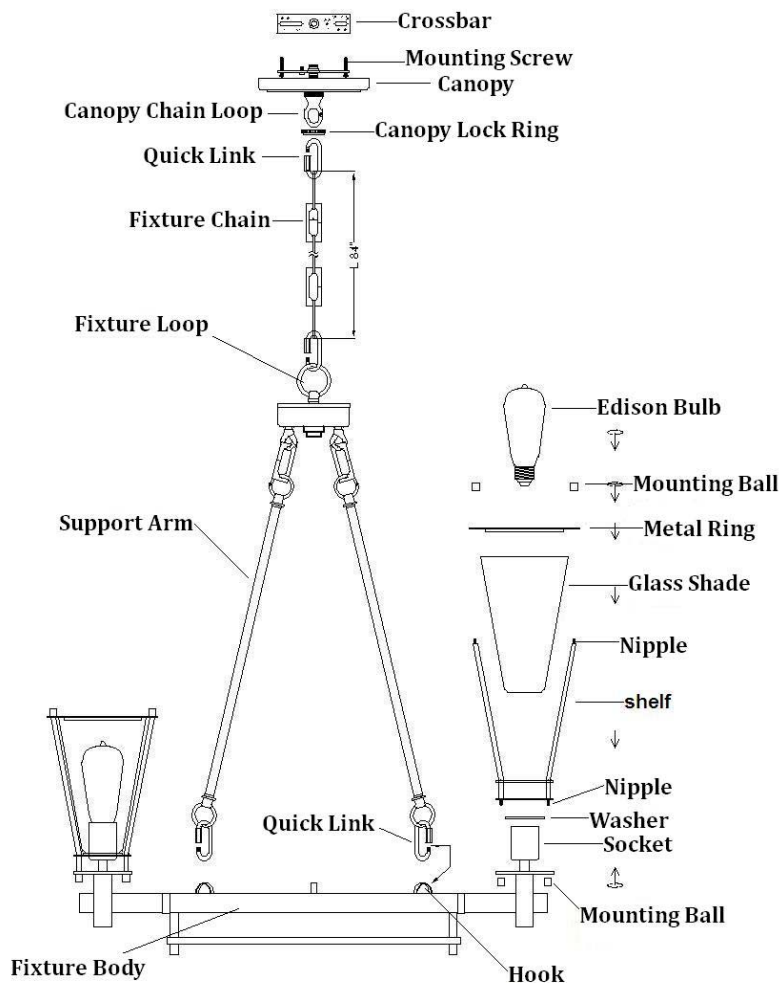

21263

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com