



UTTERMOST

ILLUSTRATION

STYLE NO. : 22032

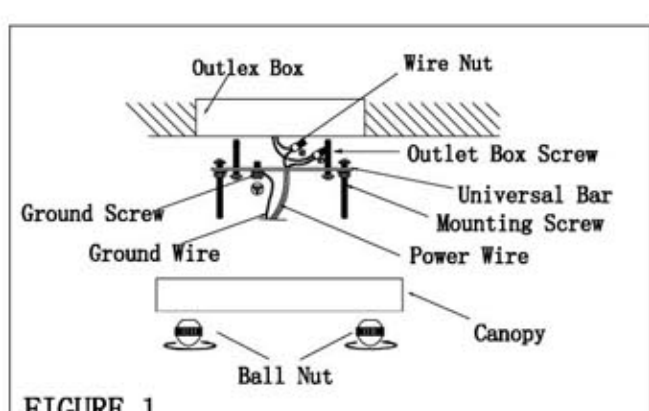


FIGURE 1


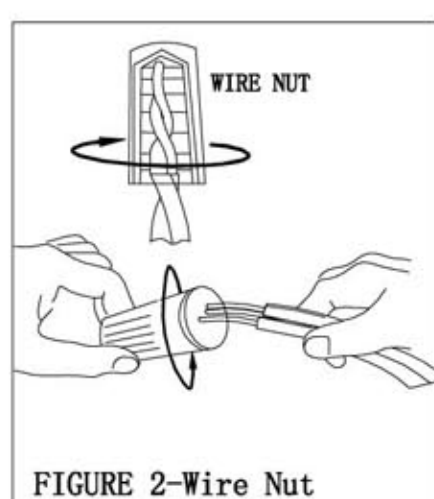


FIGURE 2-Wire Nut

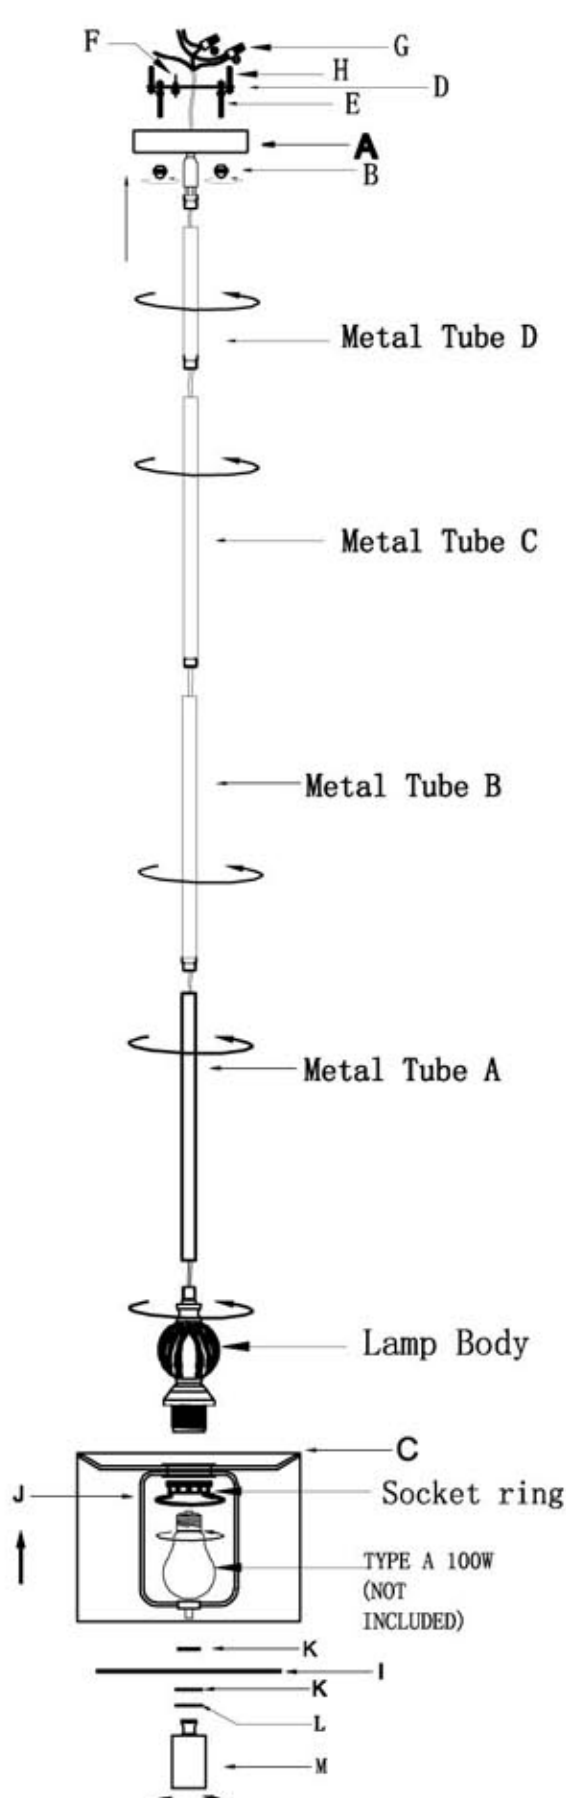

UTTERMOST

STYLE NO. : 22032 Parts and Hardware List

| | | |
|----|--------------------|------------|
| A. | Ceiling Assembly | 1PC |
| B. | Ball Nut | 2PCS |
| C. | Shade Assembly | 1PC |
| D. | Universal Bar | 1PC |
| E. | Mounting Screw | 2PCS |
| F. | Green Ground Screw | 1PC |
| G. | Wire Nut | 3PCS |
| H. | Outlet Box Screw | 2PCS |
| I. | Glass Diffuser | 1PCS |
| J. | Harp | 1PC |
| K. | Rubber Washer | 2PCS |
| L. | Flat Washer | 1PC |
| M. | Screwing Accessory | 1PC |

Please make sure that you have all the parts indicated before you begin assembling this item.

Please read Wiring Instructions before you begin assembling and installing your Ceiling Lamp.

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock.

Assembly Instruction

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged.
2. Remove the Ball Nuts(B) under the Canopy from the Mounting Screws(E), and take out the Universal Bar(D). Attach the Universal Bar(D) to the Outlet Box by using two Outlet Box Screws(H). (See Figure1)
3. Install the ground wire in the Universal Bar(D) with the supplied Green Ground Screw(F).
4. Place the null wire, ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire, smooth wire evenly against the smooth wire from the Outlet Box. (Connecting the Wires-See Figure 2)
5. After the wires are connected, tuck them carefully inside the Outlet Box. Attach the Ceiling Assembly(A) to the Mounting Screws(E) and secure with two Ball Nuts(B). (See Figure1)
6. Screw the Shade Assembly(C) onto the Metal Tube A until tight.
7. Repeat the Step 6 with the Metal Tube B, C and D.
8. Install the two 60 Watt, Type A bulb (sold separately) into the sockets of the fixture.
9. Remove the Screwing Accessory(N) under the nipple from the Shade Assembly(C), and take out the Glass Diffuser(I).
10. Place the Rubber Washer(L), Glass Diffuser(I), Rubber Washer(L), Flat Washer(M) step by step onto the Shade Assembly(C) and secure by the Screwing Assembly(N). (See Illustration)
11. Take out the eleven Hanging Glass Tubes(K) and hang the longest one up to the Screwing Assembly(N), and the other ten Tubes hang up to the Glass Diffuser(C) around the Screwing Assembly(N).