


Assembly Instructions For

F2735/3 (E) 12/11

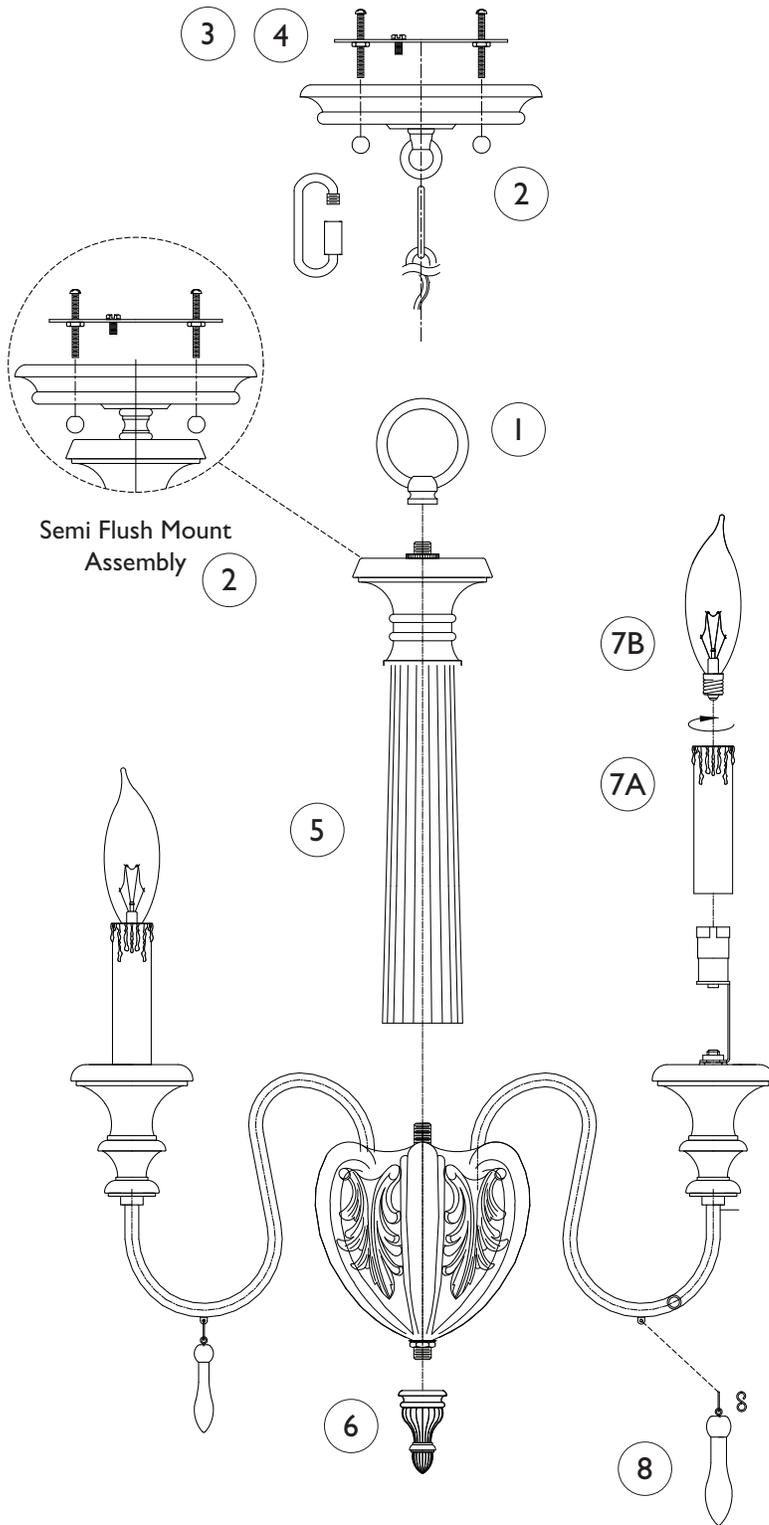

IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR
CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

1. Slip fixture loop down through the fixture wires, and then screw on top of fixture.
2. This fixture can be mounted onto ceiling either as chain hung or flush mount:

CHAIN HUNG INSTALLATION:

- A. Take fixture wire (with plastic insulation) and ground wire and thread through fixture loop. Then install loop onto threaded pipe located at top of fixture.
- B. This fixture is supplied with 2 threaded chain links. These links are opened and closed by twisting cylinder on chain link. One threaded chain link should be installed onto canopy loop and the other should be installed onto fixture loop. The standard chain should be installed in between these 2 threaded chain links.
- C. Determine the desired length of chain to hang. Remove any unwanted links with chain plier.
- D. Take ground wire and weave through above chain links, then thread through center hole in canopy loop. Repeat with fixture wire (wire with plastic insulation).

FLUSH MOUNT INSTALLATION:

- A. Remove and discard canopy loop and threaded pipe from fixture plate.
 - B. Take ground wire and fixture wire through fixture plate, lock washer, and hex nut. Lock all together on top of fixture by tightening hex nut onto threaded pipe.
3. Cut excess wires leaving only 6" (15cm) length of wires above canopy. Split fixture wire into two strands. Then strip off 3/4" (19mm) of outer plastic insulation.
 4. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
 5. Install the center column onto the threaded pipe.
 6. Install the front onto the bottom of the fixture.
 7. A. Install candle tube by slipping through sockets.
 B. Install type-B, candelabra base, of 60 Watt maximum bulbs (not included).
 8. Hang all tassels as shown on drawing.
 NOTE: To replace broken tassels, extras are included in hardware bag. Replace by gently bending open pin, remove broken pin, hook new one, then close back pin. Avoid bending pin into sharp angle.